


 
 





Control Amplifier Volume

When the remote control is set up to operate your TV, the MUTE and VOLUME buttons adjust your TV volume when in SAT mode. To use the remote to adjust the volume of a remote-controllable audio receiver or amplifier instead of adjusting the TV's volume setting, use the steps on this page.






-  Press and hold AUX until all Mode buttons are lit, then release it. The AUX mode button blinks.
-  Press POUND (#).
-  Press the plus (+) side of the VOLUME button.
-  Press the 0 number button.
-  Press POUND (#). The AUX mode button flashes three times.

Make sure the remote controls the amplifier's volume in other modes:




-  Press SAT.
-  Press the plus (+) and minus (-) sides of the VOLUME button.
-  Your tuner/amplifier's volume changes, and the AUX mode button lights instead of the TV mode button.

Control TV Volume

When the remote control has been set up to operate a remote-controllable audio receiver or amplifier instead of your TV's volume setting, the MUTE and VOLUME buttons adjust your AUX device's volume when in SAT mode. To use the remote to adjust your TV's volume again, use the steps on this page.

-  Press and hold TV until all Mode buttons are lit, then release it. The TV mode button blinks.
-  Press POUND (#).
-  Press the plus (+) side of the VOLUME button.
-  Press the 0 number button.
-  Press POUND (#). The TV mode button flashes three times.

Make sure the remote controls the TV's volume in other modes:

-  Press SAT.
-  Press the plus (+) and minus (-) sides of the VOLUME button.
-  Your TV's volume changes, and the TV mode button lights instead of the AUX mode button.