

HOPPER / JOEY REMOTE CONTROL COLOR BUTTON MENU SHORTCUT LIST

Latest 17 June 2015

FROM SCREEN	BUTTON	MENU / SCREEN	
Live TV	Red	TV Activity	
	Green	Turn On / Off Closed Captioning	
	Yellow - Green	System Status	
	Yellow	Settings	
	Yellow - 1	Parental Controls	
	Yellow - 2	Guide Settings	
	Yellow - 2 - 1	Favorite Channels	
	Yellow - 2 - 2	Format Guide	
	Yellow - 2 - 3	Cursor	
	Yellow - 3	Closed Captioning	
	Yellow - 4	Audio	
	Yellow - 4 - 1	Alternate Audio	
	Yellow - 4 - 2	Audio Output	
	Yellow - 5	DVR Defaults	
	Yellow - 5 - 1	DVR Timer Defaults	
	Yellow - 5 - 2	PrimeTime Anytime	
	Yellow - 6	Remote Manager	
	Yellow - 7	Screen Adjustments	
	Yellow - 7 - 1	HDTV	
	Yellow - 7 - 2	Format TV	
	Yellow - 8	Network Setup	
	Yellow - 8 - 1	Broadband	
	Yellow - 8 - 2	Phone Line	
	Yellow - 8 - 3	Tests	
	Yellow - 8 - 4	Whole-Home Setup : Display Settings	
	Yellow - 8 - 5	Caller ID	
	Yellow - 8 - 6	Wireless Joey Access Point	
	Yellow - 9	Diagnostics	
	Yellow - 9 - 1	N/A Joey	Over the Air Locals
	Yellow - 9 - 2	N/A Joey	Point dish
	Yellow - 9 - 3	9 - 2 Joey	System Status
	Yellow - 9 - 4	9 - 3 Joey	Factory Defaults
	Yellow - 9 - 5	9 - 4 Joey	System Wizard
	Yellow - 9 - 6	9 - 5 Joey	Updates
	Yellow - 9 - 7	9 - 6 Joey	TV Enhancements
	Yellow - 9 - 8	N/A Joey	Control 4 Automation
	Yellow - 9 - 9	9 - 7 Joey	Multi-Swap
	Yellow - 9 - Reset Receiver	9 - 8 Joey	Reset Receiver
	Yellow - Bluetooth	N/A Joey	Bluetooth
	Yellow - Paired Devices	N/A Joey	Device Manager
Yellow - HDMI - CEC		HDMI - CEC	
Yellow - Yellow	N/A Joey	Point Dish	
Yellow - Blue		Network Setup	
Yellow - Blue - 1		Broadband	
Yellow - Blue - 2		Phone Line	
Yellow - Blue - 3		Tests	
Yellow - Blue - 4		Whole-Home Setup : Display Settings	
Yellow - Blue - 5		Caller ID	
Yellow - Blue - 6		Wireless Joey Access Point	
Blue		Apps	
Main Menu	Green	On Demand	
	Yellow	Settings	
	Yellow - Yellow	Point Dish	
Settings Menu	Green	System Status	
	Yellow	Point dish	
	Blue	Network Setup	
Network Setup	Green	System Status	
	Yellow	Point Dish	
	Yellow	System Status	
Diagnostics	Green	System Status	
	Yellow	Point dish	
	Blue	Network Setup	

If an option in a menu has a color next to it, press the matching color button. Your choice both highlights and selects the option. Settings menu tiles are invisibly labeled 1-9, just count across the screen and press that number.

HOPPER / JOEY REMOTE CONTROL COLOR BUTTON MENU SHORTCUT LIST

Latest 17 June 2015

FROM SCREEN	MENU / SCREEN			
Live TV	TV Activity	Turn On / Off Closed Captioning	System - Status Settings x2 Point Dish Network - Setup	Apps
Main Menu		On Demand	Settings x2 Point Dish	
Settings Menu		System Status	Point Dish	Network Setup
Network Setup		System Status	Point Dish	
Diagnostics		System Status	Point Dish	Network Setup

If an option in a menu has a color next to it, press the matching color button. Your choice both highlights and selects the option. Settings menu tiles are invisibly labeled 1-9, just count across the screen and press that number.

Point Dish is not available for the Joey.

HOPPER / JOEY REMOTE CONTROL COLOR BUTTON MENU SHORTCUT LIST

Latest 17 June 2015

FROM SCREEN	BUTTON	MENU / SCREEN
Live TV	Red	TV Activity
	Green	Turn On / Off Closed Captioning
	Yellow - Green	System Status
	Yellow	Settings
	Yellow - Yellow	Point Dish
	Yellow - Blue	Network Setup
	Blue	Apps
Main Menu	Green	On Demand
	Yellow	Settings
	Yellow - Yellow	Point Dish
Settings Menu	Green	System Status
	Yellow	Point dish
	Blue	Network Setup
Network Setup	Green	System Status
	Yellow	Point Dish
Diagnostics	Green	System Status
	Yellow	Point Dish
	Blue	Network Setup

If an option in a menu has a color next to it, press the matching color button. Your choice both highlights and selects the option. Settings menu tiles are invisibly labeled 1-9, just count across the screen and press that number.

Point Dish is not available for the Joey.