


Connections

About terminal

- This unit offers several different types of audio and video connections.
- Your TV/receiver/amplifier may or may not support all the connections shown.
- If your system does not support HDMI, you will need to select one video connection and one audio connection.
- If your system supports HDMI, this one connection provides both the audio and video connection.


Video Connections (TV)

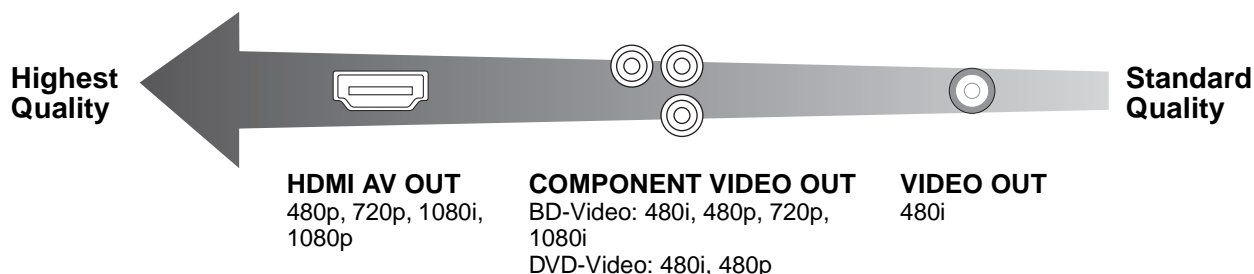

Digital Audio Connections (Receiver/Amplifier)



Analog Audio Connections (Receiver/Amplifier)

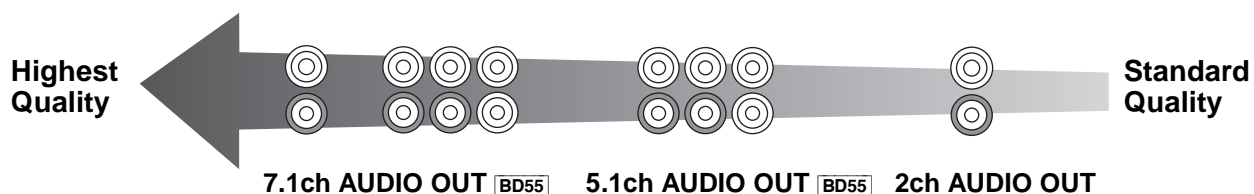

- Do not place the unit on amplifiers or equipment that may become hot. The heat can damage the unit.
- Before making any connections we strongly suggest that all units be temporarily disconnected from AC power.
- Do not connect video signals through a video recorder. Due to copy guard protection the picture may not be displayed properly

• Non-HDMI-compliant cables cannot be utilized.

- Please use High Speed HDMI Cables that have the HDMI logo (as shown on the cover). It is recommended that you use Panasonic's HDMI cable. When outputting 1080p signal, please use HDMI cables 5.0 meters (16.4 ft) or less.

Recommended part number:

RP-CDHG10 (1.0 m/3.3 ft), RP-CDHG15 (1.5 m/4.9 ft), RP-CDHG20 (2.0 m/6.6 ft), RP-CDHG30 (3.0 m/9.8 ft), RP-CDHG50 (5.0 m/16.4 ft), etc.

- This unit incorporates HDMI (Deep color, x.v.Color, High Bit rate Audio) technology. (⇒ 46, 47)