

<u>LAT.</u>	<u>LONG.</u>	<u>AZ</u>	<u>EL</u>	<u>SKEW</u>	<u>LAT.</u>	<u>LONG.</u>	<u>AZ</u>	<u>EL</u>	<u>SKEW</u>
42.5	70.0	233	34	116	50	70.0	234	27	111
42.5	72.5	229	35	114	50	72.5	229	28	109
42.5	75.0	224	36	112	50	75.0	225	29	107
42.5	77.5	219	37	110	50	77.5	220	30	106
42.5	80.0	214	38	108	50	80.0	215	30	104
42.5	82.5	208	39	105	50	82.5	209	31	102
42.5	85.0	203	39	103	50	85.0	204	32	100
42.5	87.5	197	40	100	50	87.5	198	32	98
42.5	90.0	191	40	98	50	90.0	192	32	96
42.5	92.5	185	41	95	50	92.5	186	33	94
42.5	95.0	179	41	92	50	95.0	180	33	92
42.5	97.5	174	41	89	50	97.5	174	33	90
42.5	100.0	168	41	87	50	100.0	169	33	87
42.5	102.5	163	41	84	50	102.5	163	32	85
42.5	105.0	158	40	81	50	105.0	158	32	83
42.5	107.5	153	40	79	50	107.5	153	32	81
42.5	110.0	148	39	76	50	110.0	147	31	79
42.5	112.5	144	38	74	50	112.5	144	31	77
42.5	115.0	139	38	71	50	115.0	140	30	75
42.5	117.5	135	37	69	50	117.5	136	29	74
42.5	120.0	132	36	67	50	120.0	132	29	72
42.5	122.5	128	35	65	50	122.5	129	28	70
42.5	125.0	125	33	63	50	125.0	125	27	68
45	70.0	233	32	114					
45	72.5	229	33	113					
45	75.0	224	34	111					
45	77.5	219	35	108					
45	80.0	214	35	106					
45	82.5	208	36	104					
45	85.0	203	37	102					
45	87.5	197	37	99					
45	90.0	191	38	97					
45	92.5	185	38	94					
45	95.0	180	38	92					
45	97.5	174	38	90					
45	100.0	168	38	87					
45	102.5	163	38	85					
45	105.0	158	38	82					
45	107.5	153	37	80					
45	110.0	148	37	77					
45	112.5	144	36	75					
45	115.0	140	35	73					
45	117.5	136	34	71					
45	120.0	132	33	69					
45	122.5	128	32	67					
45	125.0	125	31	65					
47.5	70.0	233	29	113					
47.5	72.5	229	30	111					
47.5	75.0	224	31	109					
47.5	77.5	219	32	107					
47.5	80.0	214	33	105					
47.5	82.5	209	34	103					
47.5	85.0	203	34	101					
47.5	87.5	197	35	99					
47.5	90.0	191	35	96					
47.5	92.5	186	35	94					
47.5	95.0	180	35	92					
47.5	97.5	174	35	90					
47.5	100.0	168	35	87	AZ	=	Azimuth Heading, Direct Compass Reading (Magnetic Deviation has been included in the chart.)		
47.5	102.5	163	35	85	EL	=	Elevation in Degrees, Direct Reading		
47.5	105.0	158	35	83	SKEW	=	Antenna "Tilt" setting using the Az/EI mount skew scale.		
47.5	107.5	153	34	81					
47.5	110.0	148	34	78					
47.5	112.5	144	33	76					
47.5	115.0	140	33	74					
47.5	117.5	136	32	72					
47.5	120.0	132	31	70					
47.5	122.5	129	30	68					
47.5	125.0	125	29	67					